



# SERIES 92

# MANUAL

# WARNING: BEFORE USAGE, THE INSTRUCTION MUST BE READ.


THANK YOU FOR PURCHASING. THE FOLLOWING ATTENTION POINTS AND INSTRUCTIONS MUST BE READ. SHOOTING WITHOUT CAUTION OR USED IMPROPERLY, BLINDNESS OR INJURIES COULD BE LEAD.



DO NOT POINT AT PEOPLE OR ANIMAL.




GUN AND GAS MUST BE PLACED IN AREA WHERE TEMPERATURE IS NOT OVER 40 °C

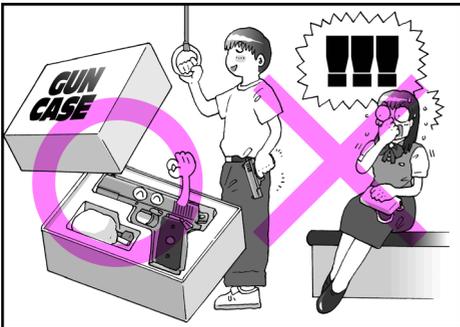

PLACE IN GUN CASE WHEN NOT IN USING OR TRANSPORTING



DO NOT USE GAS WHICH PRESSURE OVER 12 Kgs/cm<sup>2</sup>

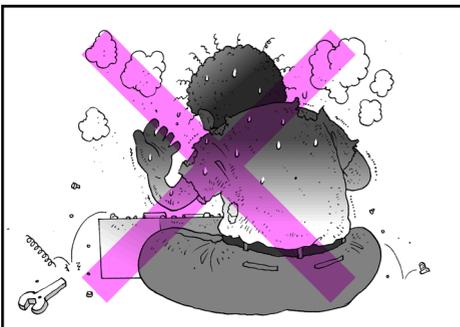

UNAUTHORIZED RECONSTRUCTION OF AIR SOFT GUN TO STRENGTHEN FIRING FUNCTION IS STRICTLY PROHIBITED.




BE CAREFULL WHAT TARGET YOU SHOOT



EYE PROTECTION DEVICE MUST BE EQUIPPED



DO NOT LOAD ANYTHING BUT BB BULLETS.

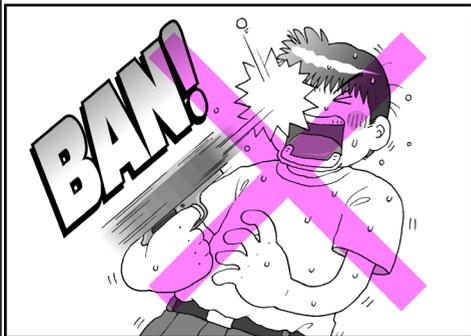

DO NOT LOOK THROUGH THE BARREL



PLEASE SHOOT IN SAFE PLACE

## OPERATION

1.REMOVE THE MAGAZINE




PRESS MAGAZINE CATCH AND REMOVE MAGAZINE

2.FILLING GAS



FILL THE GAS BOTTLE TO THE MAGAZINE IN VERTICAL DIRECTION.

### 3.LOAD BB BULLETS

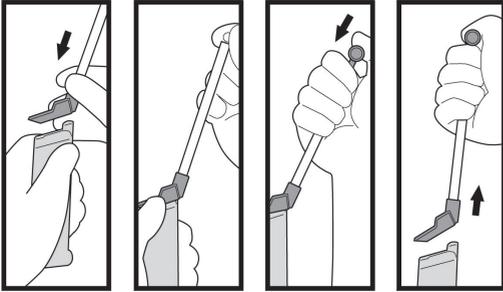

### 4.INSERT MAGAZINE



### 5.LOAD



PULL THE SLIDE COMPLETELY TO THE REAR.

### 6.SAFETY



SAFETY OFF.



SAFETY ON.

### 7.FIRE



PULL THE TRIGGER.



AFTER THE LAST SHOT IS FIRED, SLIDE WILL STOP IN THE REAR . CHECK THE CHAMBER AND MAKE SURE THE CHAMBER IS EMPTY.PRESS THE SLIDE STOP DOWN OUT OF ITS LOCKING NOTCH TO ALLOW THE SLIDE TO MOVE FORWARD.IF A LOADED MAGAZINE IS INSERTED AND THE SLIDE STOP IS PUSHED DOWN,THE SLIDE WILL LOAD A FRESH CARTRIDGE FROM THE MAGAZINE INTO THE CHAMBER, AND THE PISTOL IS READY TO FIRE.

## DISASSEMBLY

### 1.REMOVE THE MAGAZINE



PRESS MAGAZINE CATCH AND REMOVE MAGAZINE.

### 2.REMOVE THE SLIDE



PRESS THE DISASSEMBLY LATCH RELEASE AND ROTATE THE DISASSEMBLY LATCH CLOCKWISE UNTIL IT STOPS.



REMOVE THE SLIDE.

### 3.REMOVE THE BARREL



REMOVE THE RECOIL SPRING GUIDE AND SPRING.



REMOVE THE BARREL.


## REASSEMBLY

REVERSE THE DISASSEMBLY ORDER

# ADJUST TRAJECTORY



1. REMOVE THE MAGAZINE AND SLIDE.

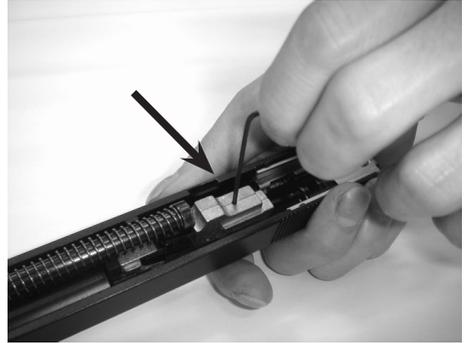

2. USE 1.5mm HEX WRENCH TO ADJUST TRAJECTORY.

STAY




ADJUST SCREW ANTICLOCKWISE


WARNING: EACH ADJUSTMENT DO NOT OVER A QUARTER TURN.



ADJUST SCREW CLOCKWISE

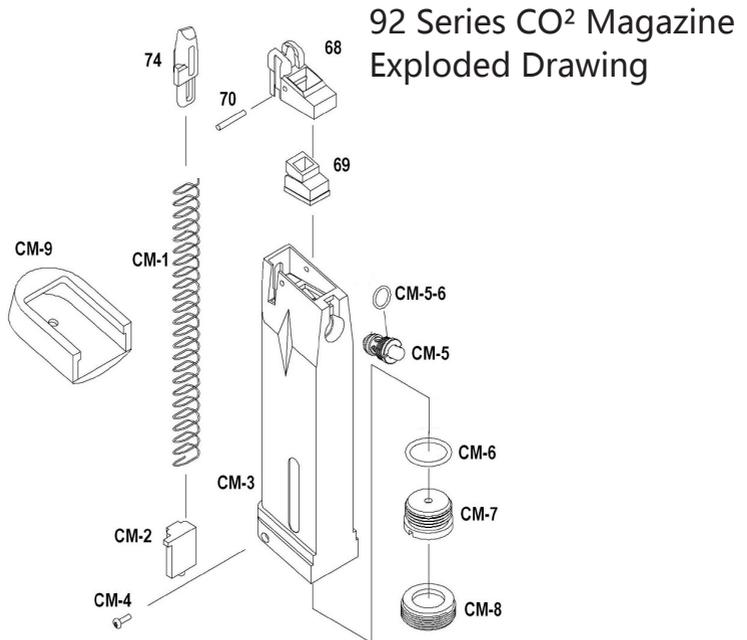

# Exploded Drawing

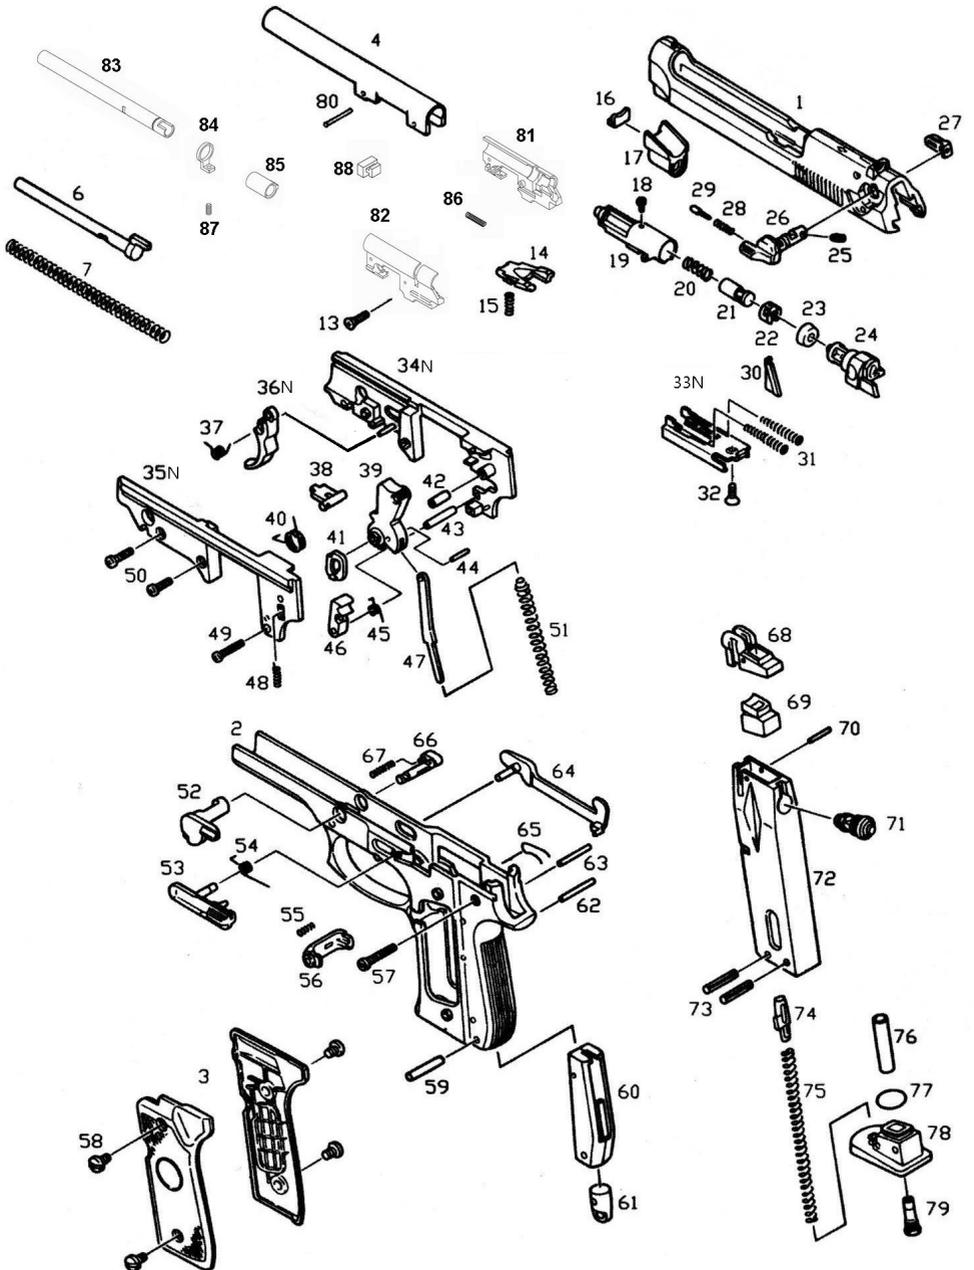

No.	Name	Price	No.	Name	Price
1	SLIDE(METAL)	1600	54	SLIDE STOP SPRING	30
2	FRAME(METAL)	2000	55	MAGAZINE CATCH SPRING	30
3	GRIP(L,R 1 SET)	240	56	MAGAZINE CATCH	180
4	OUTTER BARREL(METAL)	480	57	FRAME SCREW	30
6	RECOIL SPRING GUIDE	120	58	GRIP SCREW	30
7	RECOIL SPRING	60	59	HAMMER SPRING CAP PIN	30
13	CHAMBER CASE SCREW	30	60	HAMMER SPRING HOUSING(R,L)	120/EACH
14	LOCKING BLOCK	30	61	HAMMER SPRING CAP(PLASTIC/METAL)	30/150
15	LOCKING BLOCK SPRING	30	62	HAMMER SPRING HOUSING PIN	30
16	SLIDE PART 1	60	63	SEAR PIN(FOR PLASTIC FRAME)	30
17	SLIDE PART 2	150	64	TRIGGER BAR	150
18	CYLINDER SCREW	30	65	TRIGGER BAR SPRING	30
19	CYLINDER	180	66	DISASSEMBLING LATCH RELEASE BUTTON	60
20	CYLINDER SPRING	30	67	DISASSEMBLING LATCH RELEASE BUTTON SP.	30
21	CYLINDER VALVE	30	68	BB BULLET LIP	90
22	CYLINDER VALVE STOP	30	69	MAGAZINE GASKET	90
23	PISTON CAP	50	70	BB BULLET LIP PIN	30
24	PISTON	200	71	EXHAUST VALVE	120
25	SAFETY SCREW	30	72	MAGAZINE CASE	400
26	SAFETY(LEFT)	180	73	MAGAZINE BOTTON PIN	30
27	SAFETY(RIGHT)	90	74	FOLLOWER	30
28	SAFETYCLIP SPRING	30	75	MAGAZINE SPRING	60
29	SAFETY CLIP PIN	30	76	REGULATOR PIPE	30
30	SAFETY ROD	30	77	MAGAZINE BOTTON O-RING	30
31	CYLINDER RETURN SPRING	30	78	MAGAZINE BOTTON	160
32	PISTON SCREW	30	79	FILLING VALVE	80
33N	SLIDE RAIL	200	80	BARREL PIN	30
34N	MAIN CHASSIS(RIGHT)	270	81	CHAMBER CASE(R)	160
35N	MAIN CHASSIS(LEFT)	240	82	CHAMBER CASE(L)	160
36N	TRIGGER	180	83	INNER BARREL	240
37	TRIGGER SPRING	30	84	ADJUST RING	60
38	VALVE KNOCKER (ALLOY/STEEL)	60/120	85	RUBBER CHAMBER	100
39	HAMMER(ALLOY/STEEL)	150/300	86	BARREL CASE SPRING	30
40	VALVE KNOCKER SPRING	30	87	ADJUST SCREW	30
41	KNOCKER LOCK PLATE(ALLOY/STEEL)	60/120	88	BUFFER	60
42	HAMMER COLLAR	30	CM-1	FOLLOWER SPRING	60
43	SEAR COLLAR	30	CM-2	FOLLOWER SPRING RETAINER	60
44	HAMMER STURT PIN	30	CM-3	MAGAZINE CASE	400
45	SEAR SPRING	30	CM-4	SPRING RETAINER SCREW	30
46	SEAR	90	CM-5	VALVE	200
47	HAMMER STURT	60	CM-5-6	VALVE O RING	30
48	KNOCKER LOCKI PLATE SPRING	30	CM-6	CARTRIDGE STAB O RING	30
49	MAIN CHASSIS SCREW(SMALL)	30	CM-7	CARTRIDGE STAB	180
50	MAIN CHASSIS SCREW(LARGE)	30	CM-7-1	CARTRIDGE STAB GASKET	30
51	HAMMER STURT SPRING	60	CM-8	MAGAZINE BOTTOM CAP	100
52	DISASSEMBLING LATCH	90	CM-9	MAGAZINE BOTTOM CAP COVER	100
53	SLIDE STOP	150			